

CALIBRE

BOSSNUT & TRIPLE B TORQUE SETTINGS

Bossnut V2 onwards
Beastnut
Triple B

- 1 Main lower pivot shaft
- 2 Main lower pivot bolt
- 3 Main lower pivot bearings (6901 2RS) 12 x 24x 6mm
- 4 Large Top hat washers x2
- 5 Rocker link
- 6 Rocker lower bearings (6900 2RS) 10 x 22 x 6mm
- 7 Rocker upper bearings (6800 2RS) 10 x 19 x 5mm
- 8 Rocker lower mounting bolts x2
- 9 Small top hat washers x4
- 10 Rocker upper pivot shaft x2
- 11 Rocker upper pivot bolt x2
- 12 Shock bolt x2
- 13 Shock shaft upper
- 14 Shock shaft lower
- 15 Male SS/CS pivot x2
- 16 Female SS/CS pivot x2
- 17 Bushings x4
- 18 Washers x4

